



Soling tuning guide

	TWS Kn.	Jib	Uppers	Lowers
	0/6	Light	+4 mm	-6 mm
Base setting	6/10	Light	28,5	26
	10/14	Light	0	+4mm
	14/18	Heavy	+2 mm	+6 mm
	18/23	Heavy	+3 mm	+7 mm
	over 23	Heavy	0	+8 mm

Tension gauge mod. Loose PT-2

The shroud tension is measured with the slides in the middle

